

| Earbuds | Left earbud | Right earbud | LED Indicator | Voice prompt | |
|-------------------------------------|--|--|---|--|---|
| Power On | Remove the earbuds from charging case/long press 2 seconds | | Blue light flash 3 times | Power ON | |
| Power Off | Put into the charging case/The earbuds will turn off automatically when disconnected with bluetooth for 3 minutes/Press and hold the touch area for 4 seconds | | White light flash 3 times | Power OFF | |
| TWS ready to pair | It will automatically be paired when device power on | | TWS pairing: Blue and white lights flash alternately, after pairing blue lights flash | / | |
| Ready to pair with cellphone | / | | Blue lights flash, then lights off after connecting with cellphone | Ready to pair: Pairing, When connected : connected | E |
| Disconnect | 1 | | Blue lights flash | Disconnected | |
| Play Music | 2 clicks | | Light off | / | A |
| Pause Music | 2 clicks | | Light off | / | |
| Previous song | 3 clicks | | Light off | / | F |
| Next song | | 3 clicks | Light off | / | |
| Volume + | | Click once | Light off | Maximum volume | E |
| Volume - | Click once | | Light off | / | |
| ANC ON/OFF | ANC ON: Long press 1.5s, ANC OFF: 1.5s | | Light off | ANC ONANC OFF | ι |
| TRANSPARENCY ON/TRANSPARENCY OFF | | TRANSPARENCY ON: Long press 1.5s, TRANSPARENCY OFF: Long press 1.5s | Light off | Transparency ON Transparency OFF | C |
| Enable Voice Assistant | 4 Clicks | | Light off | default tone | |
| Disable Voice Assistant | 2 clicks | | Light off | default tone | S |
| Incoming Call | Click once | | When incoming call, blue lights flash 2 times in 1 second, then lights off when pick up the call | default tone | |
| End a call | 2 clicks | | Light off | / | - |
| Reject a call | 2 clicks | | Light off | / | - |
| Earbuds charging | Place the earbuds into the charging case | | White lights stay on, then lights off when fully charged | / | |
| Earbuds low battery alert | Voltage is lower than 3.3V, start alarm | | White light flash 2 times for every 30 seconds | Battery LOW, Remind once every 3 minutes | |
| Ear buds low battery power off | Voltage is lower than 3.1V, | it will automatically shut down | White lights flash 3 times | Power OFF | |
| | | CASE | | | |
| Electricity quantity level | 0-30% | 31-60% | 61-90% | 91-100% | |
| Charging case input | Red light on | Yellow light on | White light on | light off | |
| Charging case output | Red light flash once and stay on for 4 seconds, then light off | Yellow light flash once and stay on for 4 seconds, then light off | White light flash once and stay on for 4 seconds, then light off | | _ |
| Charging case low battery alert | When the battery is lower than 5% the red light blinks 8 times in 4 seconds | | | | _ |
| NTC alert | The red indicator blinks three times every 3 seconds until the temperature returns to normal | | | | - |